
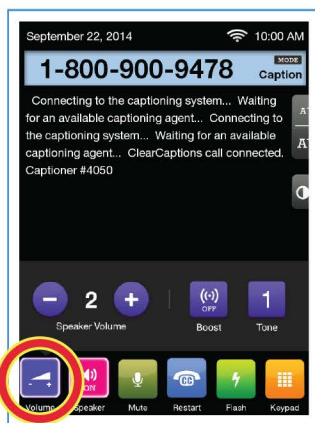 


Quick Reference Guide







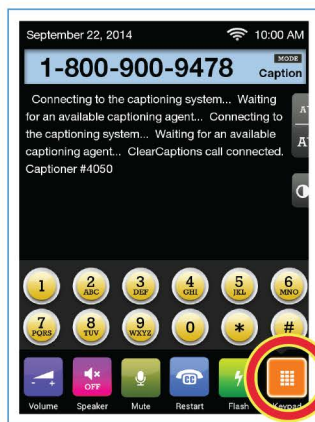
Making a Call:

1. Enter phone number using number pad.
2. Touch  or lift handset.
3. Phone will dial the number.





Adjusting Volume:

1. Touch .
2. Touch   to adjust volume, up to 16 decibels.
3. Touch  to turn ON for volume up to 50 decibels.



 


Using Number Keypad During a Call:

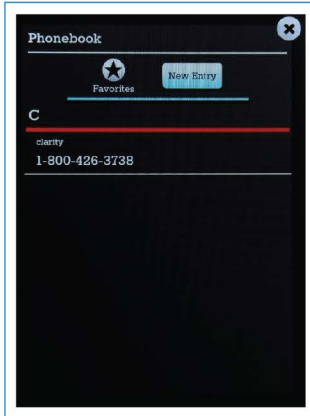
1. Touch .
2. Keypad will appear on screen.
3. Touch  again to close.





Adding Contacts to Phonebook:

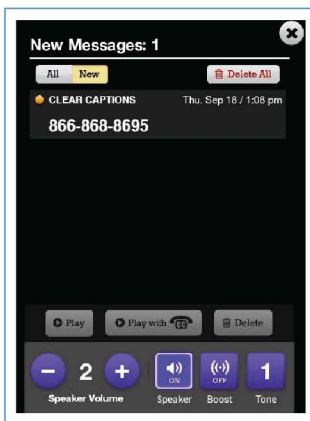
1. Touch .
2. Touch .
3. Enter new contact name and phone number.
4. Touch .

Quick Reference Guide







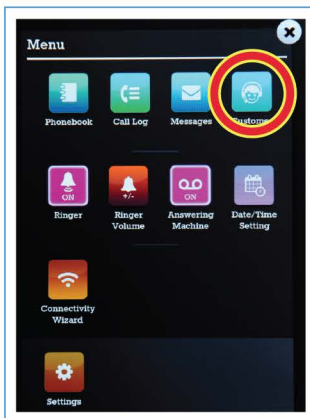
Using Phonebook to Make a Call:

1. Touch 
2. Touch contact to call.
3. Touch  or lift handset.
4. Phone will dial the number.






Using Answering Machine:

1. Touch  then touch message to review.
2. Touch  for playback with captions.
3. To delete, touch message. Touch 
4. To delete all messages, touch 



Contacting Customer Service:

1. Touch 
2. Touch 
3. Touch  or lift handset.
4. Phone will dial the number.

**For additional questions or support, please call
Customer Care at 866-868-8695**